



installation instructions

MODEL 1002 WATER TEMP. GAUGE (60-240°)
MODEL 1003 WATER TEMP. GAUGE (100-280°)
MODEL 1004 OIL TEMP. GAUGE (100-340°)
MODEL 1005 OIL PRESSURE GAUGE (0-100psi)


Division of Sun Electric Corporation

Harlem & Avondale, Chicago, Illinois 60631

312-631-6000

Disconnect battery ground cable to avoid accidental grounding of electrical system while making the electrical connections to meter as shown in above diagram.

NOTE: Gauge requires 2 3/32" mounting hole

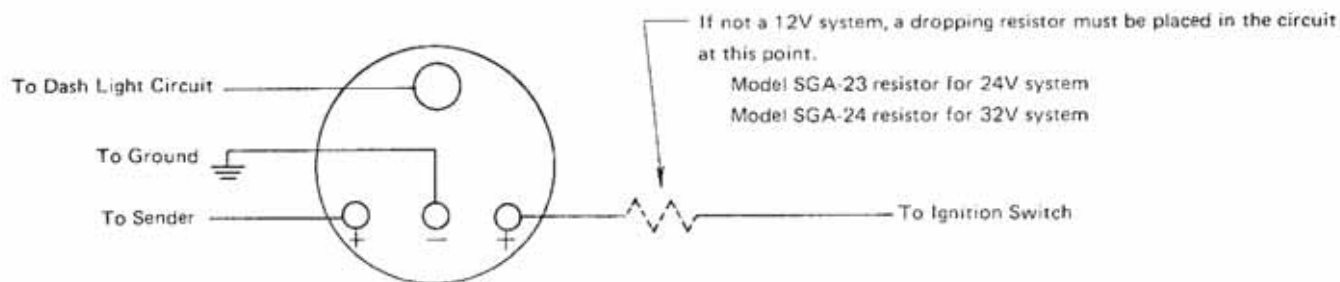

Install sender using the following accessories as needed. (NOTE: The sending unit may be installed in the hole from which the warning light sender is removed.)

ACCESSORIES

GAUGES

		1002	1003	1004	1005
SGA-15	Adapter kit for electric temperature gauge sender				
SGA-20	Tee adapter kit for pressure gauges				
SGA-22	Replacement light kit (12V)				
SGA-23	24V to 12V dropping resistor				
SGA-24	32V to 12V dropping resistor				
SGA-25-1	Water/oil temperature sender				
SGA-25-3	Dual gauge temperature sender				
SGA-26	Electric oil pressure sender				
SGA-31	Electric oil temperature sender (1/2" UNF for drain plug)				
Model-328	Metric adapter 14 x 1.5mm				
Model-329	Metric electric temperature gauge adapter m16 x 1.5mm				
Model-332	Metric oil pressure adapter 12 x 1mm				
Model-334	Oil pressure adapter 1/8 in. to 28 BSP				
Model-337	Metric oil pressure adapter 10 x 1mm				