


29802 WATER TEMPERATURE GAUGE 100-280° F

INSTALLATION INSTRUCTIONS

MOUNTING

To mount the gauge in an instrument panel, first drill a 2-9/16" hole in the panel, then insert the gauge into the hole and secure with the included mounting hardware.

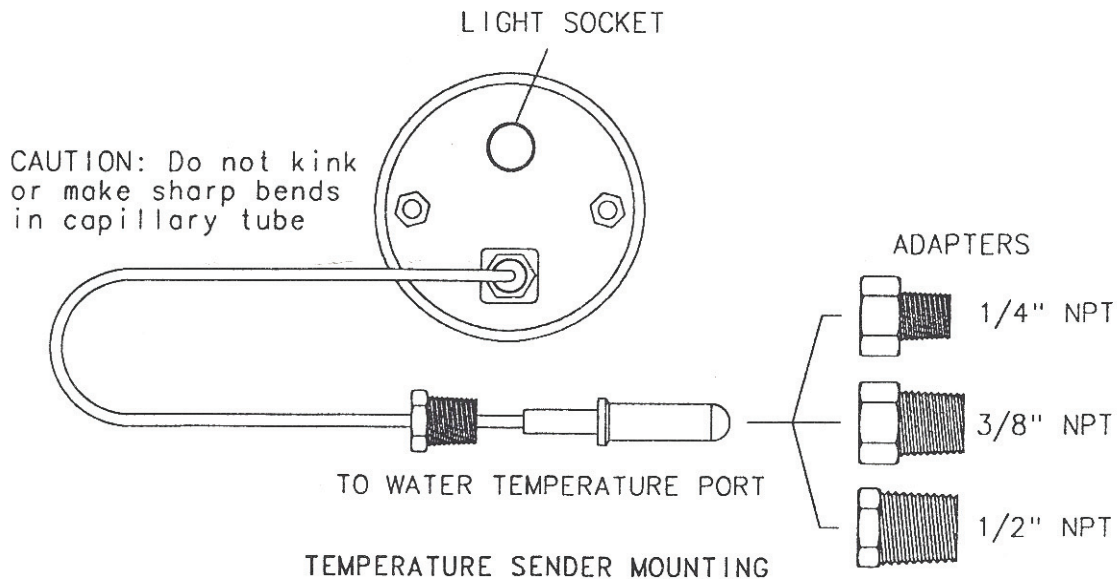

NOTE: Some late model computer controlled vehicles use electronic temperature sensors. Before removing the original sender, contact your automotive dealer to be sure that no computer functions will be disabled.

Locate the original water temperature sending unit (usually attached to the original temperature warning light). Remove the original sending unit and replace with the appropriate NPT adapter. Then route the temperature sending tubing to the adapter and install the sending unit as shown.

LIGHTING

To install lighting in the gauge, insert bulb and socket into the lighting hole in the back of the gauge and connect the red wire to the vehicle's existing lighting circuit.

NOTE: If the gauge is placed in a plastic or wooden instrument panel, connect the black wire to ground.