


29805 FUEL PRESSURE GAUGE 0-15 PSI
 29807 FUEL PRESSURE GAUGE 0-80 PSI
 INSTALLATION INSTRUCTIONS

MOUNTING

This gauge must be mounted outside of the passenger compartment unless the gauge is used in conjunction with a fuel pressure isolator.

If you are using this gauge with a fuel pressure isolator, use the plumbing instructions enclosed with the isolator kit P/N 29806.

To mount the gauge in an instrument panel, first drill a 2-9/16" hole in the panel, then insert the gauge into the hole and secure with the included mounting hardware.

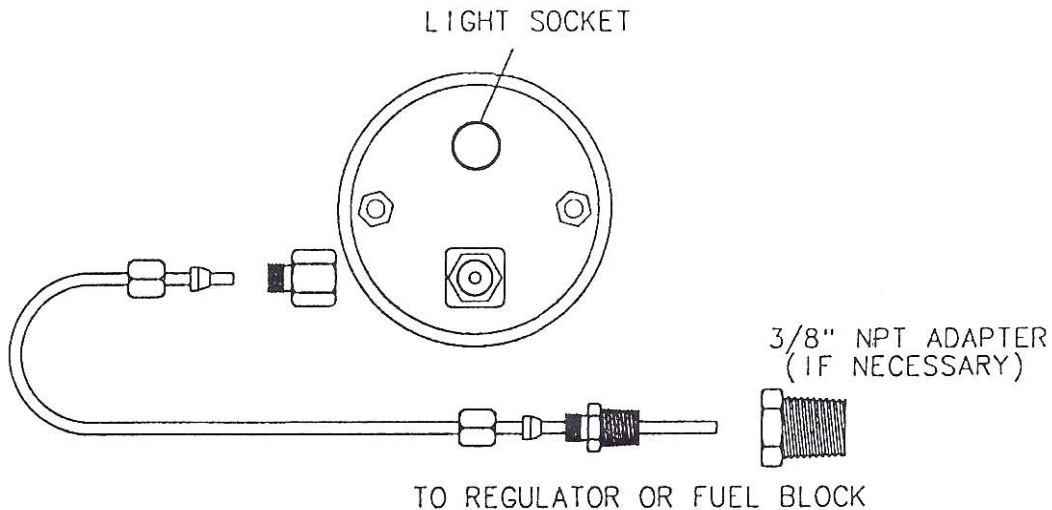

FUEL PRESSURE PLUMBING

To plumb the fuel pressure gauge, route the 1/8" tubing from the fuel pressure gauge to the regulator or fuel block. Attach the tubing to the regulator or fuel block as shown using the fitting(s) provided. Most regulators and fuel blocks have either an 1/8" or 3/8" NPT tapped hole.

LIGHTING

To install lighting in the gauge, insert bulb and socket into the lighting hole in the back of the gauge and connect the red wire to the vehicle's existing lighting circuit.

NOTE: If the gauge is placed in a plastic or wooden instrument panel, connect the black wire to ground.