

### INSTALLATION TEST

After completing the connections required, your installation may be easily tested. With your ignition OFF, the gauge should indicate 280°F or more. If engine is warmer than 130°, the gauge will indicate the actual temperature.

**NOTE:** If, with ignition ON and the engine cold, the gauge still reads 280° or over, no battery voltage is getting to the gauge or polarity of the indicator is reversed.

# ELECTRIC WATER TEMPERATURE GAUGE INSTALLATION INSTRUCTIONS

FOR CARS, TRUCKS, TRACTORS,  
MARINE AND INDUSTRIAL ENGINES

