

## AFTER INSTALLATION

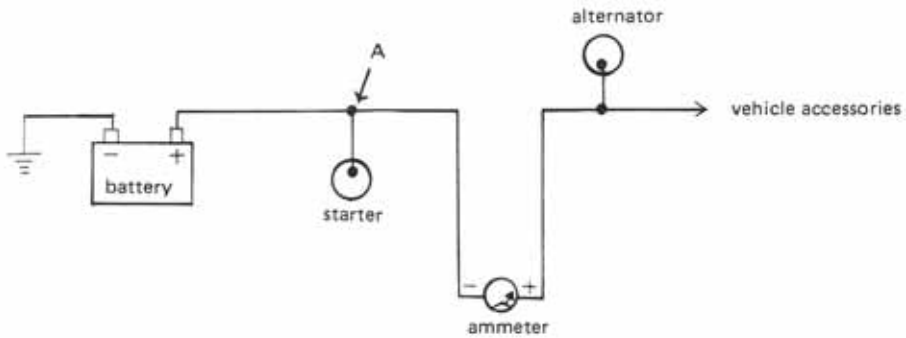


FIGURE 8 (cont.)

## FUEL PRESSURE GAUGE

The fuel pressure gauge measures the engine fuel pressure. It can alert you to a problem that may cause a breakdown.

## ASSEMBLY INSTRUCTION

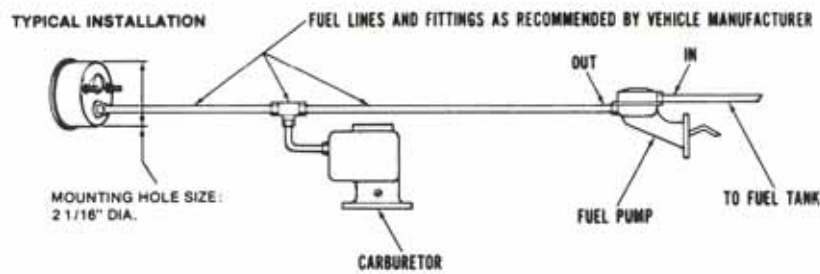


FIGURE 9

USE VEHICLE MANUFACTURER'S RECOMMENDED FUEL LINES, FITTINGS AND SEALS.

**DANGER: DO NOT MOUNT FUEL PRESSURE GAUGE IN PASSENGER COMPARTMENT ON ANY VEHICLE.**

FUEL PRESSURE GAUGES SHOULD ALWAYS BE MOUNTED IN ENGINE COMPARTMENT OF THE VEHICLE AWAY FROM SHIFT LINKAGES, THROTTLE CONTROLS AND INSURE THAT GAUGE LINES DO NOT CONTACT EXHAUST MANIFOLD.