



# TACHOMETER INSTALLATION INSTRUCTIONS

## GENERAL INFORMATION

Please read this instruction manual and review the installation procedures carefully before attempting the installation of your tachometer.

### NOTE

If additional wire is needed, use #18 or #20 AWG stranded automotive primary wire. For exposed underhood wiring, teflon insulated wire with its associated high temperature capability is recommended. Additional

connectors, and hardware, that are not included with this unit may also be needed. As the mounting configuration will vary significantly from vehicle to vehicle, hardware to mount the tachometer to the vehicle is not included. Whether you use self tapping or a machine screw and nut configuration, #8 hardware including flat and lockwashers is recommended.

### CAUTION

This unit is designed for use on twelve (12) volt negative (-) ground four (4) cycle automotive type engines. It is not designed for use on positive (+) ground electrical systems, two (2) cycle engines, aircraft or marine applications. It is compatible with most distributor equipped and distributorless ignition systems.

## SAFETY GUIDELINES

To prevent accidents that could result in serious injury and/or damage to your vehicle or test equipment, carefully follow these safety rules and test procedures.

## SUGGESTED TOOLS

Wire and terminal crimping, stripping and cutting tool(s)

Screwdrivers and nut drivers as required by hardware used

Small open end wrench set: 1/4" to 3/8" sizes may be required

Electric drill

Drill bits:

#29 or 9/64", # 18 or 11/64", 5/16", 3/8"

## PACKAGE CONTENTS

Tachometer

Tachometer Mounting Base Pad

Tachometer Housing to Column Bracket

Tachometer Dashboard Bracket

Installation hardware kit consisting of:

Wire Splices

Ring Terminals

1/4" Quick Connect Receptacle

Grommet

8-32 Nut, Black ..... 1 ea

8-32 X 5/8" Machine Screw, Black .... 1 ea

# 8 Split Washer ..... 1 ea

Knurled Thumb Nut ..... 1 ea

Voltage 12V  
Tension 12V  
Tension de 12V

Made in China

Imprimé dans China

PRODUCTO HECHO EN China

## SAFETY EQUIPMENT

### Fire Extinguisher

Never work on your car without having a suitable fire extinguisher handy. A 5-lb or larger CO<sub>2</sub> or dry chemical unit specified for gasoline/chemical/ electrical fires is recommended.

### Fireproof Container

Rags and flammable liquids should be stored only in fireproof, closed metal containers. A gasoline-soaked rag should be allowed to dry thoroughly outdoors before being discarded.

### Safety Goggles

We recommend wearing safety goggles when working on your car, to protect your eyes from battery acid, gasoline, and dust and dirt flying off moving engine parts.

**NOTE:** Never look directly into the carburetor throat while the engine is cranking or running, as sudden backfire can cause burns.

## LOOSE CLOTHING AND LONG HAIR (MOVING PARTS)

Be very careful not to get your hands, hair or clothes near any moving parts such as fan blades, belts and pulleys or throttle and transmission linkages. Never wear neckties or loose clothing when working on your car.

## JEWELRY

Never wear wrist watches, rings or other jewelry when working on your car. You'll avoid the possibility of catching on moving parts or causing an electrical short circuit which could shock or burn you.

## VENTILATION

The carbon monoxide in exhaust gas is highly toxic. To avoid asphyxiation, always operate vehicle in a well-ventilated area. If vehicle is in an enclosed area, exhaust should be routed directly to the outside via leakproof exhaust hose.

## SETTING THE BRAKE

Make sure that your car is in **Park** or **Neutral**, and that the **parking brake is firmly set**.

**NOTE:** Some vehicles have an automatic release on the parking brake when the gear shift lever is

removed from the **PARK** position. This feature must be disabled when it is necessary (for testing) to have the parking brake engaged when in the **DRIVE** position. Refer to your vehicle service manual for more information.

## HOT SURFACES

Avoid contact with hot surfaces such as exhaust manifolds and pipes, mufflers (catalytic converters), radiator and hoses. Never remove the radiator cap while the engine is hot, as escaping coolant under pressure may seriously burn you.

## SMOKING AND OPEN FLAMES

Never smoke while working on your car. Gasoline vapor is highly flammable, and the gas formed in a charging battery is explosive.

## BATTERY


Do not lay tools or equipment on the battery. Accidentally grounding the "HOT" battery terminal can shock or burn you and damage wiring, the battery or your tools and testers. Be careful of contact with battery acid. It can burn holes in your clothing and burn your skin or eyes. When operating any test instrument from an auxiliary battery, connect a jumper wire between the negative terminal of the auxiliary battery and ground on the vehicle under test. When working in a garage or other enclosed area, auxiliary battery should be located at least 18 inches above the floor to minimize the possibility of igniting gasoline vapors

## HIGH VOLTAGE

High voltage — 30,000 to 50,000 volts — is present in the ignition coil, distributor cap, ignition wires and spark plugs. When handling ignition wires while the engine is running, use insulated pliers to avoid a shock. While not lethal, a shock may cause you to jerk involuntarily and hurt yourself.

## JACK

The jack supplied with the vehicle should be used only for changing wheels. Never crawl under car or run engine while vehicle is on a jack.

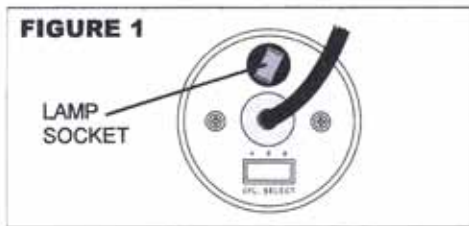**FIGURE 1**

## CYLINDER SELECTION

This tachometer should be checked for cylinder setting before installation (see figure 1). Position the **CYL** selector switch on the rear of the tachometer so that the switch actuator is opposite the number which matches the number of cylinders in the engine.

For **Chrysler DISTRIBUTORLESS IGNITION SYSTEM CONNECTIONS**, connection to Pin 43 of the Single Board Engine Controller on Distributorless Ignition equipped Chrysler vehicles requires that the **CYL** selector switch be set to the four (4) cylinder position, regardless of the number of cylinders in the engine.

## LAMP SUBSTITUTION OR REPLACEMENT


Your tachometer is supplied with an automotive type, wedge base (*full size tachometers*) or subminiature wedge base (*mini tachometers*) lamp, for illumination. This lamp should provide satisfactory illumination intensity in most applications, however the following substitute lamps are available at your local auto parts store, and may allow you to custom tailor the illumination characteristics of the tachometer to your application. Note the higher the MSCD (Mean Spherical Candela) of the lamp, the brighter it is.

LAMP #	MSCD	COLOR	BASE
73	.3	CLEAR	SUBMINIATURE WEDGE
37	.5	CLEAR	SUBMINIATURE WEDGE
74	.75	CLEAR	SUBMINIATURE WEDGE
161	1	CLEAR	WEDGE
194	2	CLEAR	WEDGE
194A	-	AMBER COATED	WEDGE
168	3	CLEAR	WEDGE

The lamp socket is located at the top rear of the tachometer (see figure 1). To remove the lamp, gently grasp the black lamp socket (use pliers if necessary) and twist it counter-clockwise approximately 1/8 turn until it stops. Pull the socket with lamp straight out of the tachometer housing. Remove the lamp from its socket by pulling it straight out. Replace the lamp as required following the chart above. Reinstall the socketed lamp by rotating it against the tachometer's PC board until it drops into place, and then rotate it approximately 1/8 turn clockwise until it reaches its mechanical stop.

### WARNING - SAFETY PRECAUTION!

**Neither the driver nor any passenger should compromise the safe operation of the vehicle by attempting to readjust the tachometer in any way while the vehicle is in motion!**

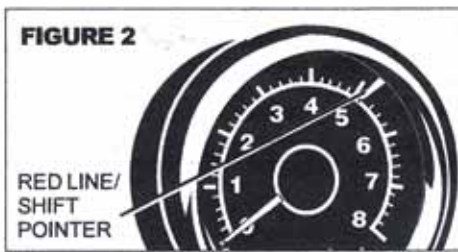**FIGURE 2**

## RED LINE / SHIFT POINTER

Adjust the **RED LINE/SHIFT POINTER** by sliding it around the meter bezel (see figure 2). This pointer may be set at any point on the meter scale, such as engine red line, or transmission shift point.

### NOTE

## FUNCTIONAL QUICK CHECK

Although every attempt has been made to make this tachometer electronically compatible with as many different ignition systems as possible, new ignition systems are being developed continually. It is suggested (especially if you have an engine that has a non OEM, or aftermarket ignition system) that the tachometer be electrically connected to the vehicle, (using alligator clip leads or other suitable means) following the steps below, and an electrical functional check of the tachometer be made, prior to making a permanent installation.

1. Clip the **BLACK** lead from the tachometer to the negative (-) battery terminal.
2. Clip the **RED** lead from the tachometer to the positive (+) battery terminal.
3. Clip the **GREEN** lead from the tachometer to the negative (-) side of the ignition coil or tach signal connection point as indicated in the **ELECTRICAL CONNECTIONS** section of this manual. **Do not allow this connection to touch ground!**
4. The **WHITE** lead is for instrument panel lighting, and need not be connected for this check.
5. When all connections are secure, start the vehicle's engine. Confirm the operation of the tachometer throughout the operating temperature range of the engine, and at both curb idle, and higher engine speeds. The tachometer should follow the speed of the engine smoothly, and show no signs of erratic operation.

Should you encounter unsatisfactory tachometer operation (erratic, no reading, etc.) on engines equipped with high performance and/or aftermarket ignition systems or ignition coils, you may have selected the incorrect tach connection point for the tachometer's **GREEN** lead, or a tachometer filter assembly may be required.

**Contact the manufacturer of the ignition system or ignition coil for information regarding tachometer connection to his product and/or the availability of an electrical filter assembly if required.**

When you are satisfied with tachometer performance, proceed to the permanent installation instructions which follow.

# MOUNTING THE TACHOMETER

Your tachometer is designed to be mounted on top of or underneath the dashboard, or on the steering column (see figures 3 and 4). If you choose the steering column mounting configuration, it will be necessary to obtain a hose clamp which is large enough in diameter to encircle the steering column. Cut off any excess strap from the hose clamp, when clamp mounting is complete.

### CAUTION

**Some steering columns are made to be collapsible upon impact. Care should be taken when tightening the clamp to avoid damage to the column.**

Be sure not to interfere with the movement or mechanism of adjustable/tilt steering columns.

Select a mounting location that allows a clear view of the tachometer, but does not obstruct access or view of controls, or view of other dashboard instruments, or the road.



### CAUTION

**Position the tachometer in its specific location and determine wire routing and connection locations before drilling any holes! Be sure to check behind areas of intended drilling for obstructions before drilling!**

Mark hole locations, and drill holes as required per the following chart.

- # 8 Self-tapping screws - #29 or 9/64" drill bit
- # 8 Machine screw hardware - #18 or 11/64" drill bit
- Clearance hole for wiring harness - 5/16" drill bit

Once the tachometer is adjusted to its final position, securely tighten all hardware.

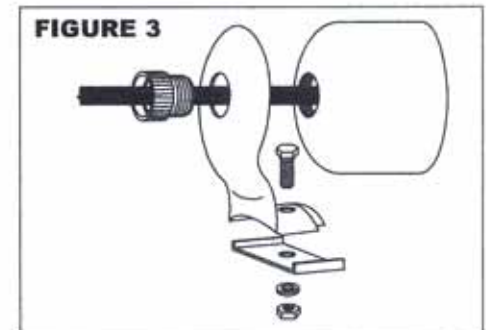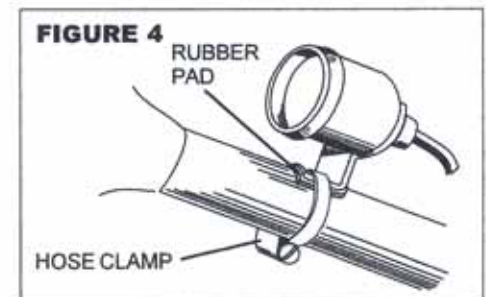**FIGURE 3****FIGURE 4**

# ELECTRICAL CONNECTIONS

Refer to your vehicle service manual while carefully following the wiring instructions.

## CAUTION

For your own personal safety, and to prevent possible damage to the electrical system of your vehicle during the installation, disconnect the negative (-) battery cable. Reconnect this cable after installation is complete.

## BLACK, RED, AND WHITE WIRE CONNECTIONS – ALL SYSTEMS

Route all wires carefully. Securing them with nylon tie wraps (not included) is suggested. Do not route wires along or against sharp edges which could cut the insulation. Also, do not route them along hot engine surfaces, such as exhaust manifolds, where high temperature could melt the insulation, or near spark plug wires.

Route wires through an existing hole in the firewall, or drill a 3/8" hole where desired, making sure there are no hidden wires, hoses, etc. that could be damaged. Insert the supplied rubber grommet in this hole for added protection against wire damage or shorting (see figure 5).

FIGURE 5

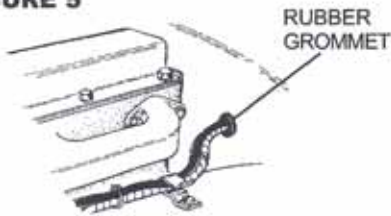


FIGURE 6



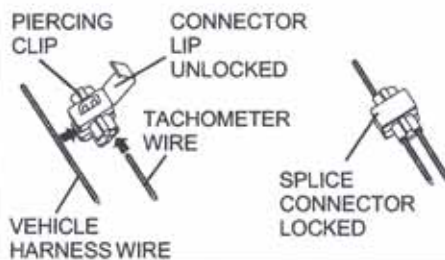


FIGURE 7

SEE THE GREEN WIRE CONNECTION SECTIONS OF THIS MANUAL

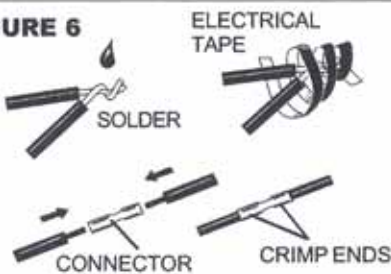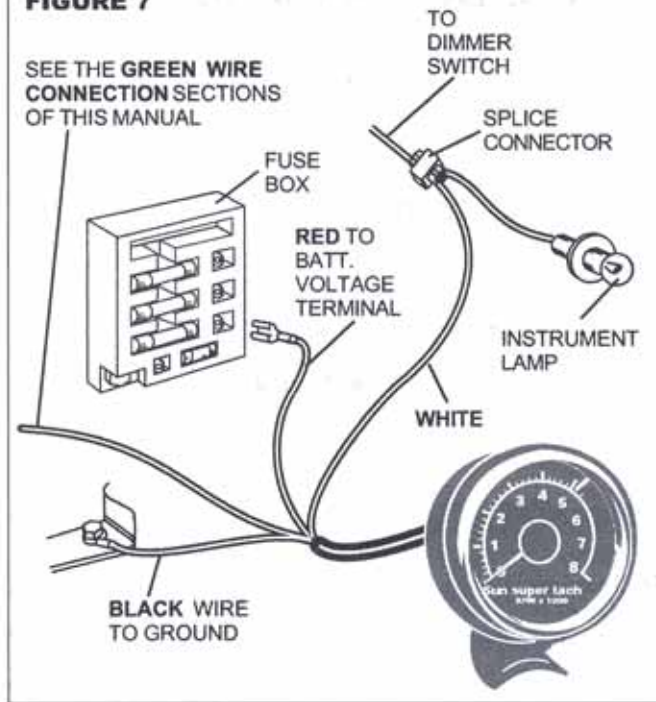

1. Connect the **BLACK** wire to the negative (-) battery terminal, or a clean unpainted chassis ground using a ring terminal or other suitable means (see figure 7).

## IMPORTANT

Although electrical ground (**BLACK** wire connection) is available under the dashboard, grounding the instrument near or under the dash may cause it to operate erratically, as any ground connection other than the negative (-) battery terminal may be "electrically noisy".

Make the following connections with splice connectors, or by an alternative method if desired (see figure 6).

2. Connect the **RED** wire to any vehicle harness wire which is energized with battery voltage **ONLY** when the ignition key is in the ON (RUN) position, **NOT OFF** or ACCESSORIES (see figures 6 and 7).
3. Connect the **WHITE** wire to the instrument panel lighting circuit or any lead that is controlled by the instrument panel dimmer control (see figure 7).

## NOTE

Some vehicles (typically imported) wire the dimmer control into the ground side of the instrument panel lighting circuit, as opposed to the more conventional "hot" or twelve (12) volt side. In vehicles which use this circuit, connect the **WHITE** wire to a circuit which is energized by the headlamp switch.

## GREEN WIRE CONNECTION

The **GREEN** wire provides the tachometer with the engine RPM (speed) signal. If your vehicle's engine is equipped with a **DISTRIBUTOR IGNITION SYSTEM** proceed to the **GREEN WIRE CONNECTION - DISTRIBUTOR EQUIPPED ENGINES** section in this manual. If your vehicle's engine is equipped with a **DIS (DISTRIBUTORLESS IGNITION SYSTEM)** proceed to the **GREEN WIRE CONNECTION - DISTRIBUTORLESS IGNITION SYSTEM EQUIPPED ENGINES** section of this manual. **DIS** equipped engines are characterized by their lack of an ignition distributor. In place of the distributor, will be one or more "ignition coil packs". Unlike the ignition

distributor which has a basically round shape, the coil pack is typically a square or rectangular package.

## GREEN WIRE CONNECTION – DISTRIBUTOR EQUIPPED ENGINES

Connect the **GREEN** wire to the negative (-) side of the ignition coil. This terminal may also be referred to as the TACH, TACH TEST, DEC, or ECU terminal. **Wiring diagrams can be found in your vehicle service manual. See the list at the end of these instructions for service manual sources.**

## GREEN WIRE CONNECTION – DISTRIBUTORLESS IGNITION SYSTEM EQUIPPED ENGINES

Many domestically built vehicles (and some imports) are now using a new type of ignition system which does not use a distributor, but instead, a system of multiple ignition coils, and the necessary sensors and computer controls to fire them in the proper order. This type of system is commonly referred to as a **DISTRIBUTORLESS IGNITION SYSTEM** or **DIS**. Your tachometer is designed to work with these systems, however proper connection to them is important. The **BLACK** (ground), **RED** (12-14 volt supply), and **WHITE** (instrument lamp) connections are the same as for distributor equipped vehicles, however connection of the **GREEN** (tach signal) wire to the ignition is specific to the engine and ignition system. **Wiring diagrams can be found in your vehicle service manual. See the list at the end of these instructions for service manual sources.**

# VEHICLE SERVICE INFORMATION

The following is a list of publishers who have service manuals for your specific vehicle. Write or call them for availability and prices, specifying the make, style, model year and VIN (Vehicle Identification Number) of your vehicle.

## ORIGINAL EQUIPMENT MANUFACTURERS' VEHICLE SERVICE MANUALS

### **Vehicle Service Manuals from General Motors Corporation**

**Buick, Cadillac,  
Chevrolet, GEO, GMC,  
Oldsmobile & Pontiac**  
Helm Incorporated  
Post Office Box 07130  
Detroit, MI 48207

### **Saturn**

Adistra Corporation  
c/o Saturn Publications  
101 Union Street  
Post Office Box 1000  
Plymouth, MI 48170

### **Vehicle Service Manuals from Ford Motor Company (Ford, Lincoln, Mercury)**

Ford Publication Dept.  
Helm Incorporated  
Post Office Box 07150  
Detroit, MI 48207

### **Vehicle Service Manuals from Chrysler Corporation**

Chrysler Corporation  
Dymont Distribution Service  
Post Office Box 360450  
Strongsville, OH 44136

### **Vehicle Service Manuals from Toyota, Honda, Nissan**

Toyota Motor Corporation  
Toyota Service Publications  
750 W. Victoria Street  
Compton, CA 90220-5538

Honda Motor Co., Ltd.  
Helm Incorporated  
Post Office Box 07280  
Detroit, MI 48207

Nissan North America, Inc.  
Dymont Distribution Service  
c/o Nissan  
20770 Westwood Drive  
Strongsville, OH 44136

## **FULL ONE (1) YEAR WARRANTY**

Actron Manufacturing Company, 15825 Industrial Parkway, Cleveland, Ohio 44135, warrants to the user that this unit will be free from defects in materials and workmanship for a period of one (1) year from the date of original purchase. Any unit that fails within this period will be repaired or replaced at Actron's option and without charge when returned to the Factory. Actron requests that a copy of the original, dated sales receipt be returned with the unit to determine if the warranty period is still in effect. This warranty does not apply to damages caused by accident, alterations, or improper or unreasonable use. Expendable items, such as batteries, fuses, lamp bulbs, flash tubes are also excluded from this warranty. ACTRON MANUFACTURING COMPANY DISCLAIMS ANY LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY WRITTEN WARRANTY ON THE UNIT. Some states do not allow the disclaimer of liability for incidental or consequential damages, so the above disclaimer may or may not apply to you. This warranty gives specific legal rights, and you may also have rights which vary from state to state.

## AFTERMARKET VEHICLE SERVICE MANUALS

**Chilton Book Company**  
Chilton Way  
Radnor, PA 19089

**Cordura Publications**  
Mitchell Manuals, Inc.  
Post Office Box 26260  
San Diego, CA. 92126

**Haynes Publications**  
861 Lawrence Drive  
Newbury Park, CA 91320

**Motor's Auto Repair Manual**  
Hearst Company  
250 W. 55th Street  
New York, NY 10019

Sunpro and Sun Super Tach II are registered trademarks of, and used under exclusive license from, Snap-On Tools Company.